


IE 輸入 192.168.2.1 進入設定頁面 帳號 admin 密碼 1234

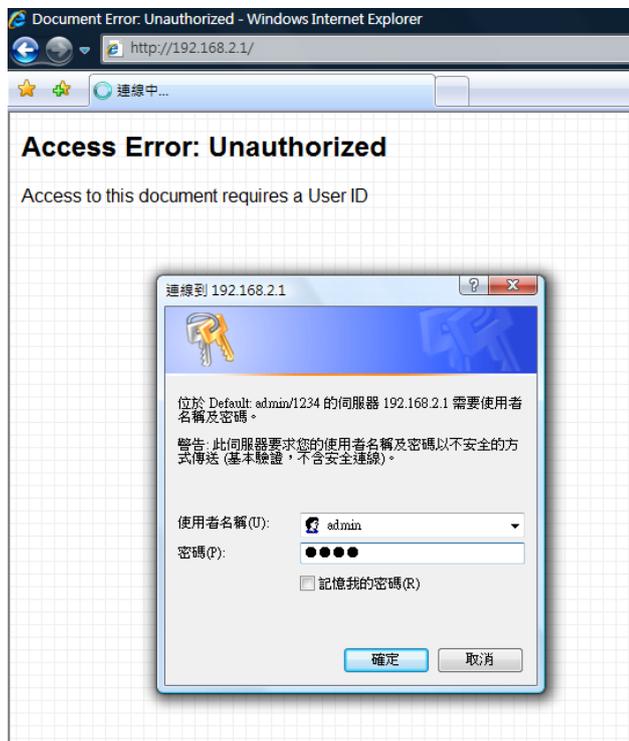

一般安裝設定 -> 廣域網路 -> 啓用 UPnP



09-53 IP:192.168.2.1 V1.06 執行時間 0K\_00:09:54

Quick Setup | General Setup | Status | Tools | Languages | Home

Home / 一般安裝設定 / 廣域網路

This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE or PPTP by click the item value of WAN Access type.

廣域網路存取型態: 靜態IP

IP位址: 60.251.140.6

子網掩碼: 255.255.255.0

預設網域: 60.251.140.254

DNS 1: 168.95.1.1

DNS 2:

DNS 3:

複製MAC位址: 000000000000

啟用UPnP

Enable TTL

啟用遠端管理



## 查詢設備 IP

一般安裝設定 -> 區域網路 -> 顯示用戶



### DHCP

This table shows the assigned IP address, MAC address and time expired for each DHCP leased client.

IP位址	MAC 位址	限定時間(秒)
192.168.2.10	00:14:85:2a:ff:49	863496
192.168.2.2	00:1e:53:60:04:41	863631

設定 DMZ 進階設定 -> DMZ -> 啓用 DMZ IP 設定查詢的 192.168.2.2

The image shows the EDIMAX router configuration interface. At the top, there is a status bar with 'R116108 IP:192.168.2.1 V1.06 執行時間:0天:00:16:09'. Below this is a navigation menu with 'Quick Setup', 'General Setup', 'Status', 'Tools', 'Languages', and 'Home'. The main content area displays several configuration icons: '系統' (System), '無線網路' (Wireless Network), '區域網路' (Local Area Network), '廣域網路' (Wide Area Network), and '進階設定' (Advanced Settings). The '進階設定' icon is highlighted with a red box.





設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源  
待 IP 分享器啓動完成在接上 netTV BOX 的電源

