



👞 条統管理員: C:\Windows\system32\cmd.exe		Х	J
C:\Users\further_test>ipconfig		^	
Windows IP 設定			
Ethernet 介面卡 區域連線:			
連線特定 DNS 尾碼			
通道介面卡 區域連線 * :			
連線特定 DNS 尾碼........ 連結-本機 IPv6 位址.......fe80::5efe:192.168.0.2%9 預設閘道............			
通道介面卡 區域連線 * 2:			
媒體狀態................ 媒體已中斷連線 連線特定 DNS 尾碼........			
C:\Users\further_test>_		-	

IE 輸入 IP192.168.0.1 進入設定

帳號 admin 密碼 password

www.cosmosdream.com

Advanced -> Options

		dvanced
LAN	Features	
<u>Wireless</u>	Internet	Communication Applications, Special Applications, DMZ, Multi-DMZ
Password	Access Control	Restrict Internet Access.
<u>Status</u>	Dynamic DNS	Use with "Virtual Servers" to allow Internet users to connect to your Servers using a URL instead of an IP address.
<u>Advanced</u>	URL Filter	Block access to Web sites by defining "filter strings".
Log Out Restart	<u>User Groups</u>	Set User Group for access control and site filter features.
	<u>Options</u>	Backup DNS, UPnP.
	Schedule	Define the schedule used in URL filter and Firewall Rules.
(elp)	<u>Virtual Servers</u>	Allow Internet users to access Servers on your LAN.
	WAN Port	An alternative to using the Wizard for Internet Access configuration.
	Administration	
	<u>PC Database</u>	View and modify the list of PCs.
	Config File	Backup or restore the configuration file for the Wireless Router.
	Logs	Set system log options, E-mailing of logs, view all logs.
	Diagnostics	Ping, DNS Lookup.
	<u>QoS</u>	Quality of Service settings.
	Remote Admin	Allow management of this device via the Internet.
	Routing	Allow management of this device via the Internet.
	Security	Firewall and other security-related settings.
	Upgrade Firmware	The firmware can be upgraded using your Web Browser.

啓動 UPnP



宙駿電子



設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源 待 IP 分享器啓動完成在接上 netTV BOX 的電源

www.cosmosdream.com