



先使用命令提示字元輸入 IPCONFIG

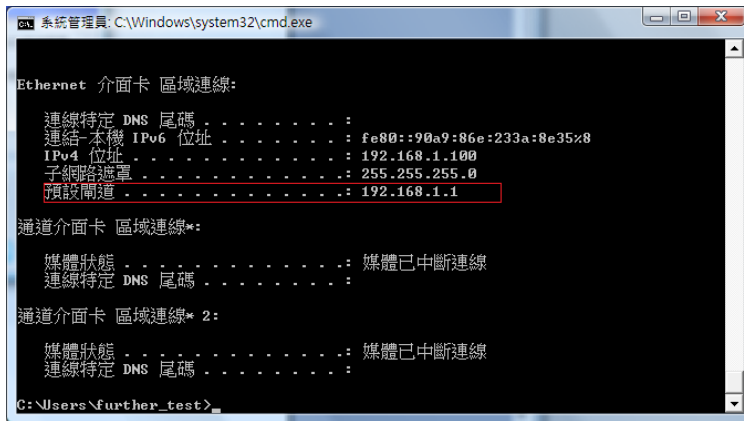


開啓 IE 將找到的閘道位址輸入

192.168.1.1

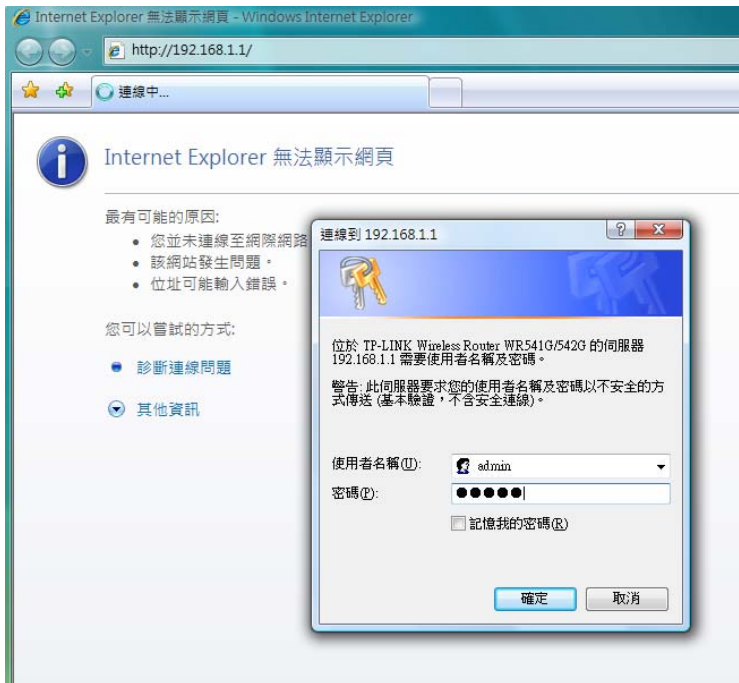

## UPnP 設定 -&gt; Forwarding -&gt; UPnP -&gt; Enable

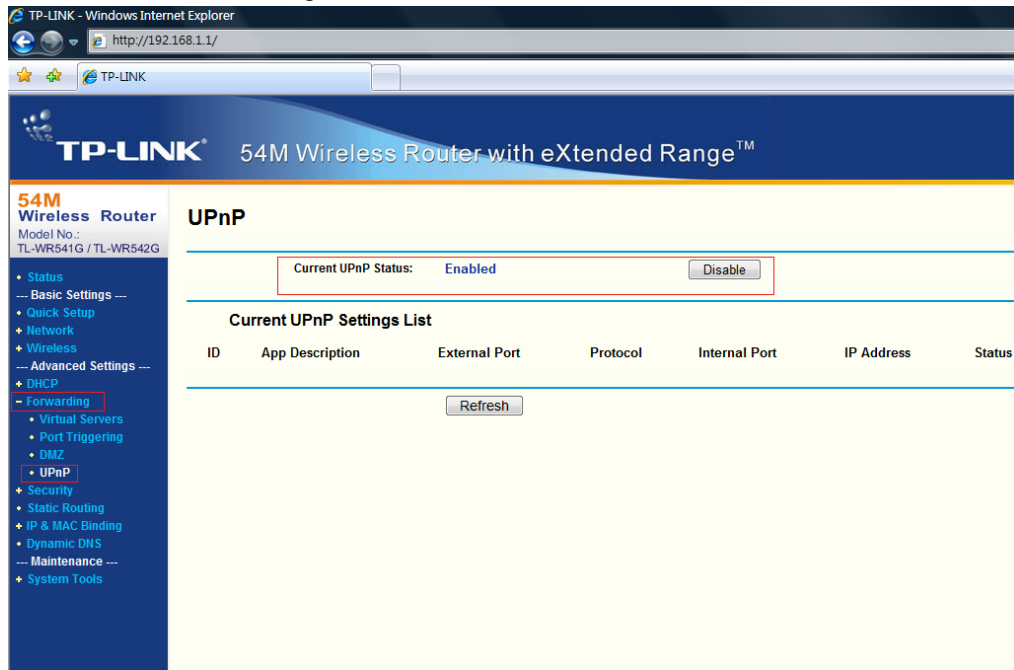

TP-LINK 54M Wireless Router with eXtended Range™

**54M Wireless Router**  
Model No.: TL-WR541G / TL-WR542G

- Status
- Basic Settings
- Quick Setup
- Network
- Wireless
- Advanced Settings
  - DHCP
  - Forwarding
    - Virtual Servers
    - Port Triggering
    - DMZ
    - UPnP**
  - Security
  - Static Routing
  - IP & MAC Binding
  - Dynamic DNS
  - Maintenance
  - System Tools

**UPnP**

Current UPnP Status: **Enabled**

**Current UPnP Settings List**

ID	App Description	External Port	Protocol	Internal Port	IP Address	Status
<input type="button" value="Refresh"/>						

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源  
待 IP 分享器啓動完成在接上 netTV BOX 的電源

