



先使用命令提示字元輸入 IPCONFIG

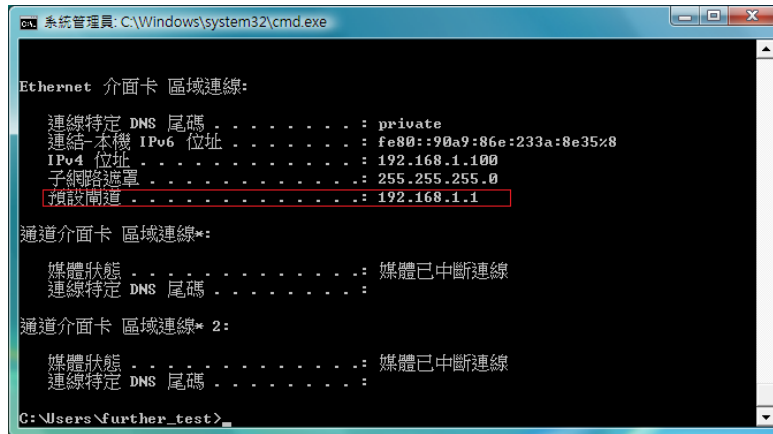


開啓 IE 將找到的閘道位址輸入

192.168.1.1

帳號 guset 密碼 guest

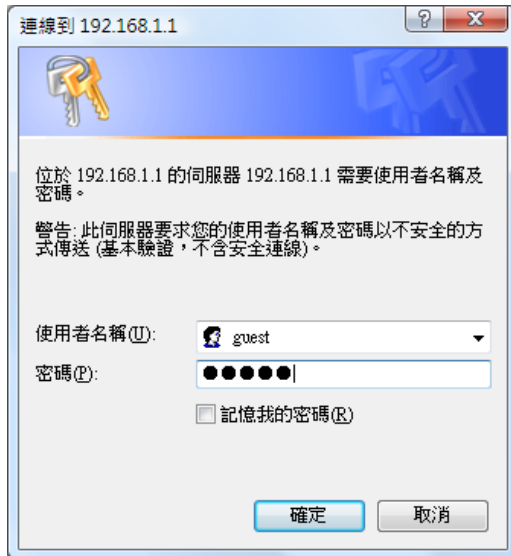

UPnP 設定 -> misc -> upnp -> enable

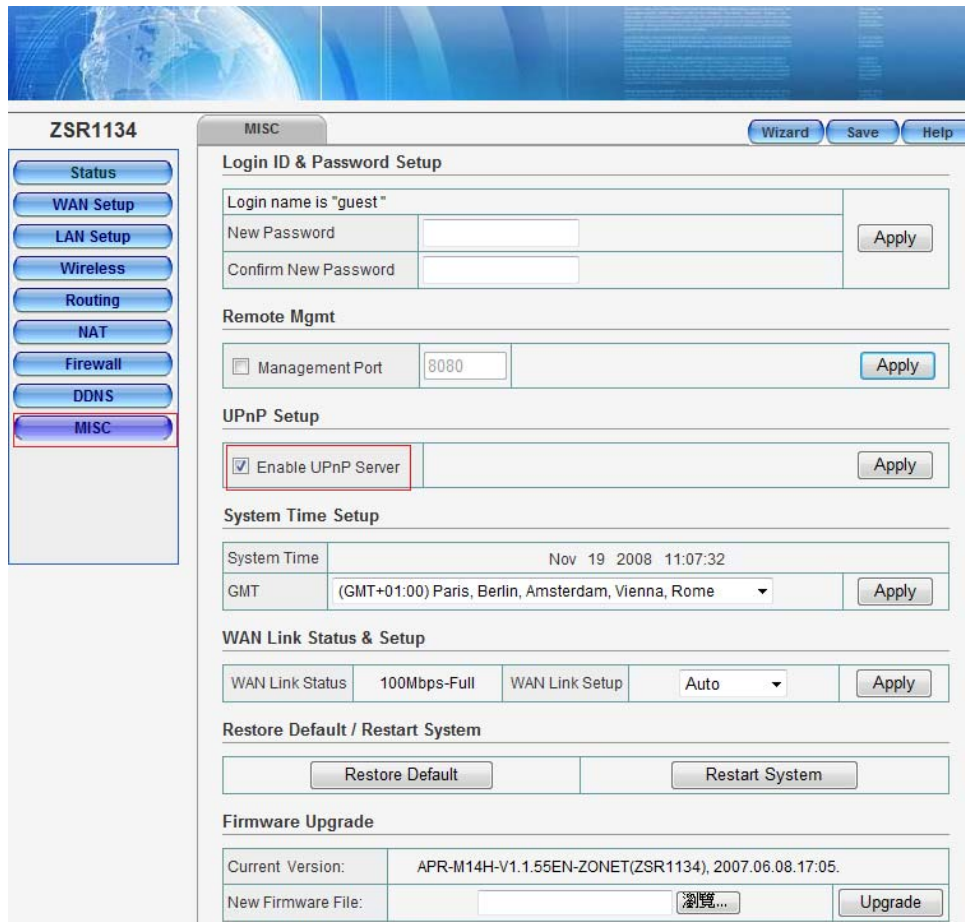

The screenshot shows the web interface for a ZSR1134 device. The left sidebar contains navigation buttons for Status, WAN Setup, LAN Setup, Wireless, Routing, NAT, Firewall, DDNS, and MISC. The MISC tab is selected. The main content area includes sections for Login ID & Password Setup, Remote Mgmt, UPnP Setup, System Time Setup, WAN Link Status & Setup, Restore Default / Restart System, and Firmware Upgrade. In the UPnP Setup section, the 'Enable UPnP Server' checkbox is checked and highlighted with a red box. Other sections include password fields, management port settings, system time, WAN link status, and firmware upgrade options.

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源  
待 IP 分享器啓動完成在接上 netTV BOX 的電源

