


查出 Default Gateway

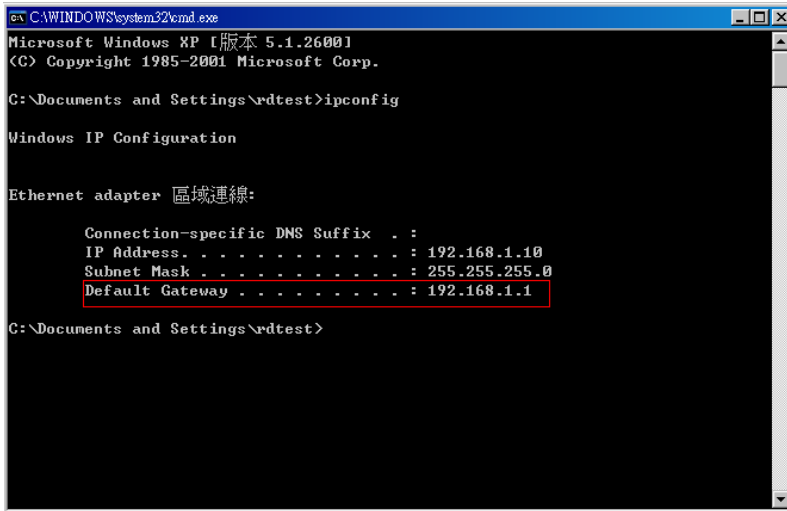

查得 IP 位址為 192.168.0.1 後，開啓 IE 輸入



Applications -> UPnP -> Enable UPnP

The screenshot shows the web interface of a Vigor2700 Series ADSL2/2+ Firewall Router. The left sidebar contains a navigation menu with the following items: Quick Start Wizard, Online Status, Internet Access, LAN, NAT, Firewall, Bandwidth Management, Applications (highlighted), Dynamic DNS, Schedule, RADIUS, UPnP (highlighted), IGMP, Wake on LAN, VPN and Remote Access, Certificate Management, Wireless LAN, System Maintenance, and Diagnostics. The main content area is titled "Applications >> UPnP" and contains the following settings:

UPnP

- Enable UPnP Service
 - Enable Connection control Service
 - Enable Connection Status Service

Note: If you intend running UPnP service inside your LAN, you should check the appropriate service above to allow control, as well as the appropriate UPnP settings.

Buttons: OK, Clear, Cancel

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源
待 IP 分享器啓動完成在接上 netTV BOX 的電源