

## 查出 Default Gateway

```
ca C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\rdtest>IPCONFIG

Windows IP Configuration

Ethernet adapter 區域連線:

    Connection-specific DNS Suffix  . :
    IP Address . . . . . : 192.168.0.2
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.0.1


C:\Documents and Settings\rdtest>
```

查得 IP 位址為 192.168.0.1 後，開啓 password 輸入



查到網頁進入 Advanced

## 開啟 UPnP

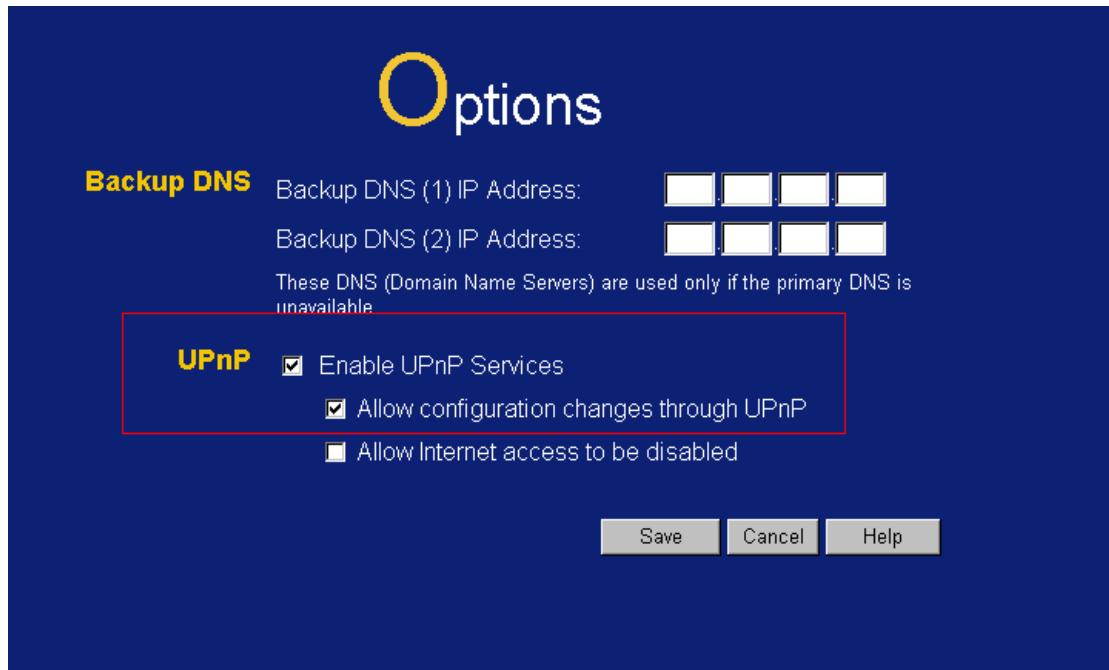

**Options**

**Backup DNS** Backup DNS (1) IP Address:

Backup DNS (2) IP Address:

These DNS (Domain Name Servers) are used only if the primary DNS is unavailable

**UPnP**  Enable UPnP Services

Allow configuration changes through UPnP

Allow Internet access to be disabled

設定完成後將 IP 分享器重新啟動並移除 netTV BOX 電源  
待 IP 分享器啟動完成在接上 netTV BOX 的電源