


查出 Default Gateway

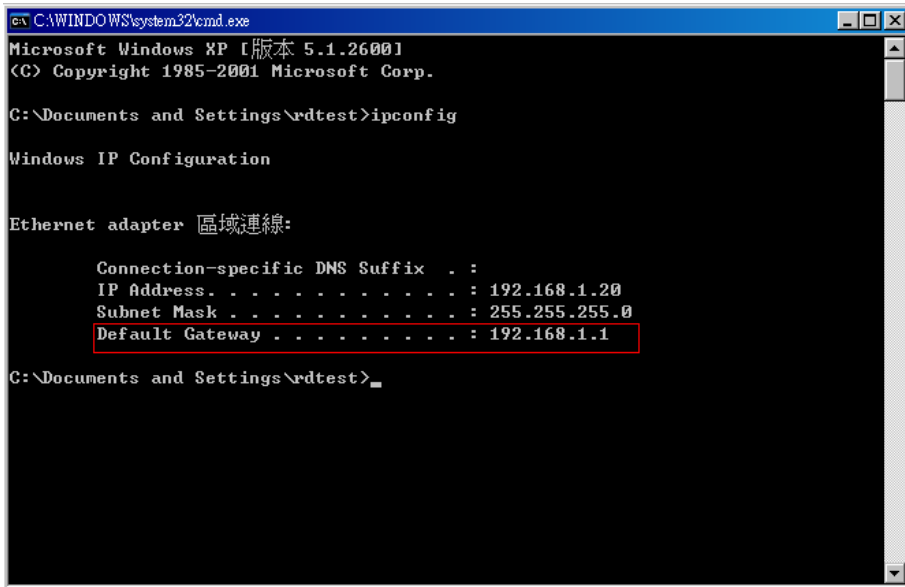

查得 IP 位址為 192.168.1.1 後，開啓 admin 輸入 password



Advanced -> UPnP -> Enable

MZK-W300NH English OK

Status Management Network **Advanced** Firewall Wireless LAN Log

Setup Wizard

- DHCP Server
- UPnP**
- Dynamic DNS
- Static Routing
- IPv6 Bridge

UPnP Enable

Apply Clear

PLANEX COMMUNICATIONS INC.

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源
待 IP 分享器啓動完成在接上 netTV BOX 的電源