

## 查出 Default Gateway

```
ca\CAWINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.26001
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\rctest>ipconfig

Windows IP Configuration

Ethernet adapter 區域連線:

    Connection-specific DNS Suffix  . :
    IP Address. . . . .                : 192.168.1.100
    Subnet Mask . . . . .              : 255.255.255.0
    Default Gateway . . . . .          : 192.168.1.1

C:\Documents and Settings\rctest>
```

## 點選 forwarding

**54M Wireless Router**  
Model No.: TL-WR541G / TL-WR542G

- Status
- Basic Settings ---
- Quick Setup
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding**
  - Virtual Servers
  - Port Triggering
  - DMZ
  - UPnP
- Security

### Virtual Servers

ID	Service Port	IP Address	Protocol	Status	Modify
Add New.. Enable All Disable All Delete All					
Previous Next					

## 進入 UPnP

**54M**  
**Wireless Router**  
Model No.:  
TL-WR541G / TL-WR542G

- Status
- Basic Settings ---
- Quick Setup
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding ---
  - Virtual Servers
  - Port Triggering
  - DMZ
  - **UPnP**
- Security
- Static Routing
- IP & MAC Binding
- Dynamic DNS

## UPnP

---

**Current UPnP Status:**    **Enabled**   

---

**Current UPnP Settings List**

ID	App Description	External Port	Protocol	Internal Port	IP Addr
1	nPlay(TCPVirCMD)	5020	TCP	5020	192.168.
2	nPlay(UDPVirCMD)	5020	UDP	5020	192.168.
3	nPlay(TCPVirAV)	5000	TCP	5000	192.168.
4	nPlay(UDPVirAV)	5000	UDP	5000	192.168.
5	nPlay(TCPUCMD)	51759	TCP	51759	192.168.
6	nPlay(UDPUCMD)	51759	UDP	51759	192.168.
7	nPlay(TCPUAV)	51739	TCP	51739	192.168.
8	nPlay(UDPUAV)	51739	UDP	51739	192.168.

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源  
待 IP 分享器啓動完成在接上 netTV BOX 的電源