

查出 Default Gateway

```
ca\CAWINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\rctest>ipconfig

Windows IP Configuration

Ethernet adapter 區域連線:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . .                : 192.168.1.100
    Subnet Mask . . . . .              : 255.255.255.0
    Default Gateway . . . . .          : 192.168.1.1

C:\Documents and Settings\rctest>
```

點選 forwarding

54M Wireless Router
Model No.: TL-WR541G / TL-WR542G

- Status
- Basic Settings ---
- Quick Setup
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding**
 - Virtual Servers
 - Port Triggering
 - DMZ
 - UPnP
- Security

Virtual Servers

ID	Service Port	IP Address	Protocol	Status	Modify
Add New.. Enable All Disable All Delete All					
Previous Next					

進入 UPnP

54M
Wireless Router
Model No.:
TL-WR541G / TL-WR542G

- Status
- Basic Settings ---
- Quick Setup
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding
 - Virtual Servers
 - Port Triggering
 - DMZ
 - **UPnP**
- Security
- Static Routing
- IP & MAC Binding
- Dynamic DNS

UPnP

Current UPnP Status: **Enabled**

Current UPnP Settings List

ID	App Description	External Port	Protocol	Internal Port	IP Addr
1	nPlay(TCPVirCMD)	5020	TCP	5020	192.168.
2	nPlay(UDPVirCMD)	5020	UDP	5020	192.168.
3	nPlay(TCPVirAV)	5000	TCP	5000	192.168.
4	nPlay(UDPVirAV)	5000	UDP	5000	192.168.
5	nPlay(TCPUCMD)	51759	TCP	51759	192.168.
6	nPlay(UDPUCMD)	51759	UDP	51759	192.168.
7	nPlay(TCPUAV)	51739	TCP	51739	192.168.
8	nPlay(UDPUAV)	51739	UDP	51739	192.168.

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源
待 IP 分享器啓動完成在接上 netTV BOX 的電源