


先使用命令提示字元輸入 IPCONFIG

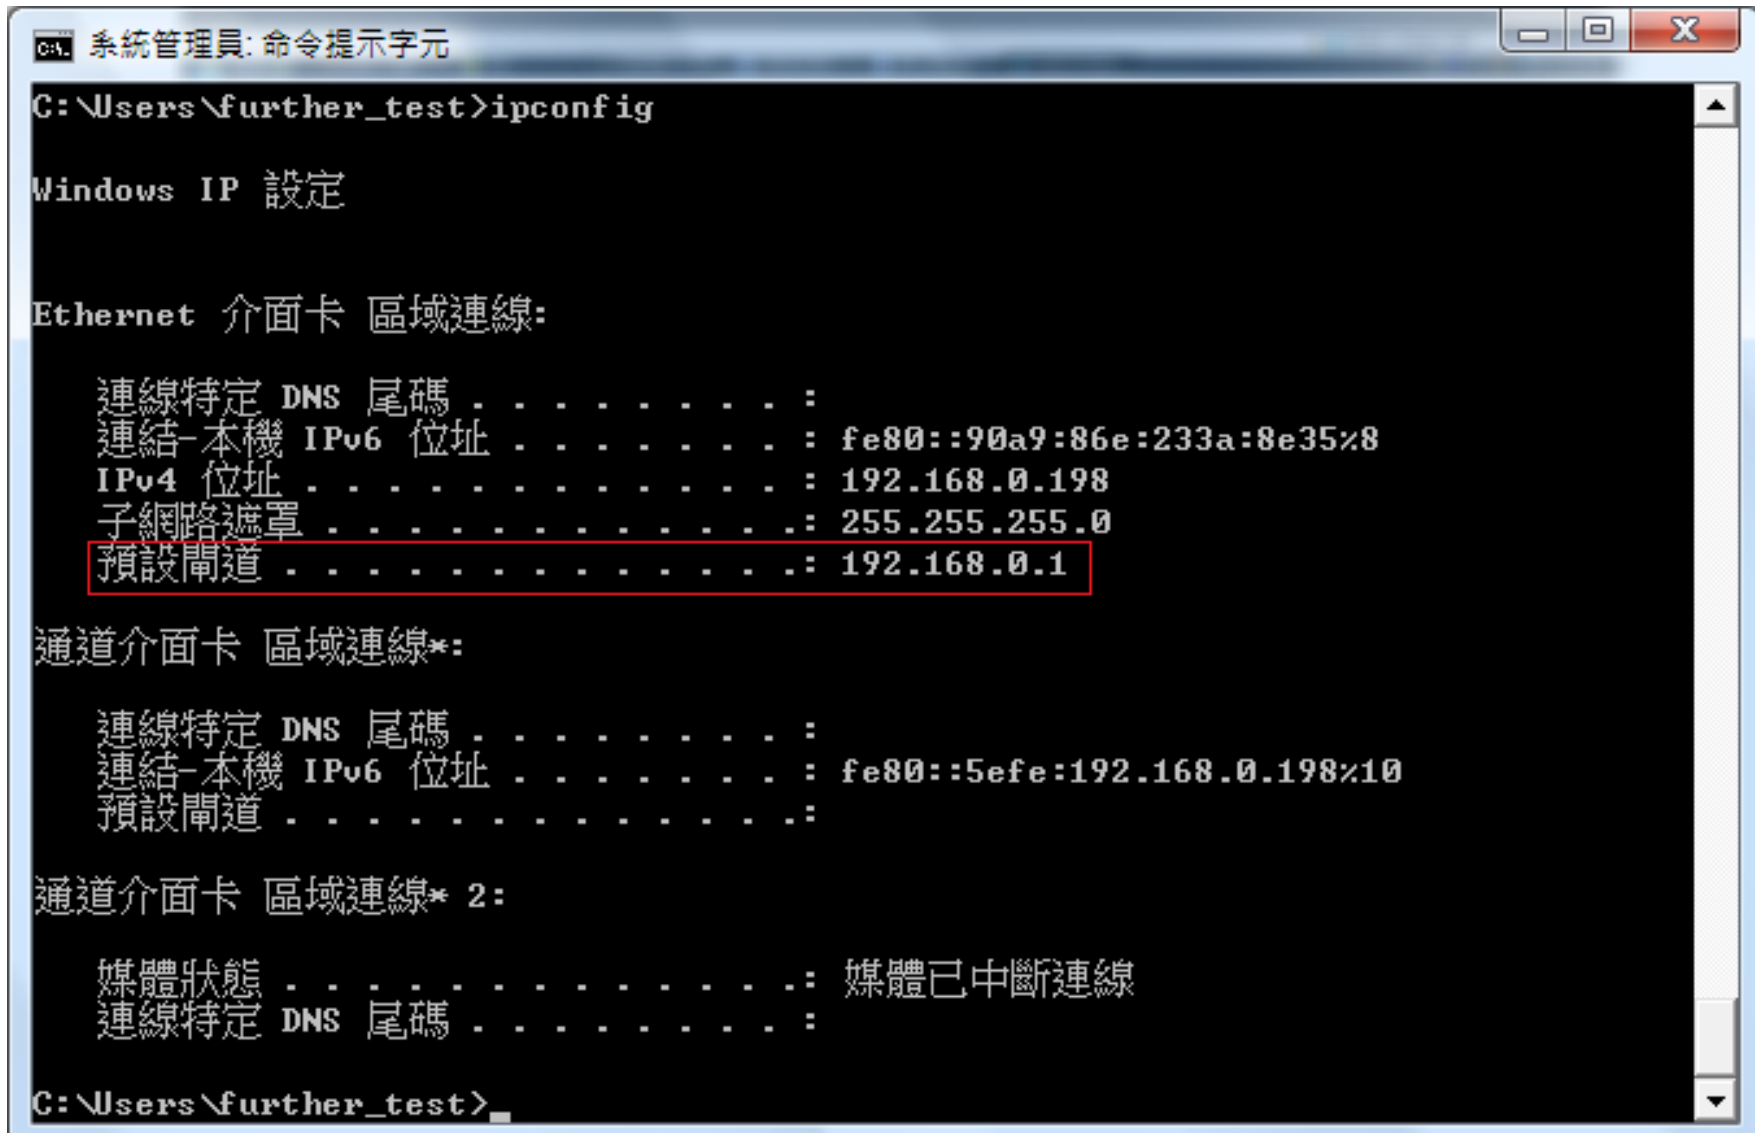

```
C:\Users\further_test>ipconfig

Windows IP 設定

Ethernet 介面卡 區域連線:

    連線特定 DNS 尾碼 . . . . . :
    連結-本機 IPv6 位址 . . . . . : fe80::90a9:86e:233a:8e35%8
    IPv4 位址 . . . . . : 192.168.0.198
    子網路遮罩 . . . . . : 255.255.255.0
    預設閘道 . . . . . : 192.168.0.1

通道介面卡 區域連線*:

    連線特定 DNS 尾碼 . . . . . :
    連結-本機 IPv6 位址 . . . . . : fe80::5efe:192.168.0.198%10
    預設閘道 . . . . . :


通道介面卡 區域連線* 2:

    媒體狀態 . . . . . : 媒體已中斷連線
    連線特定 DNS 尾碼 . . . . . :

C:\Users\further_test>
```

開啓 IE 將找到的閘道位址輸入

192.168.0.1

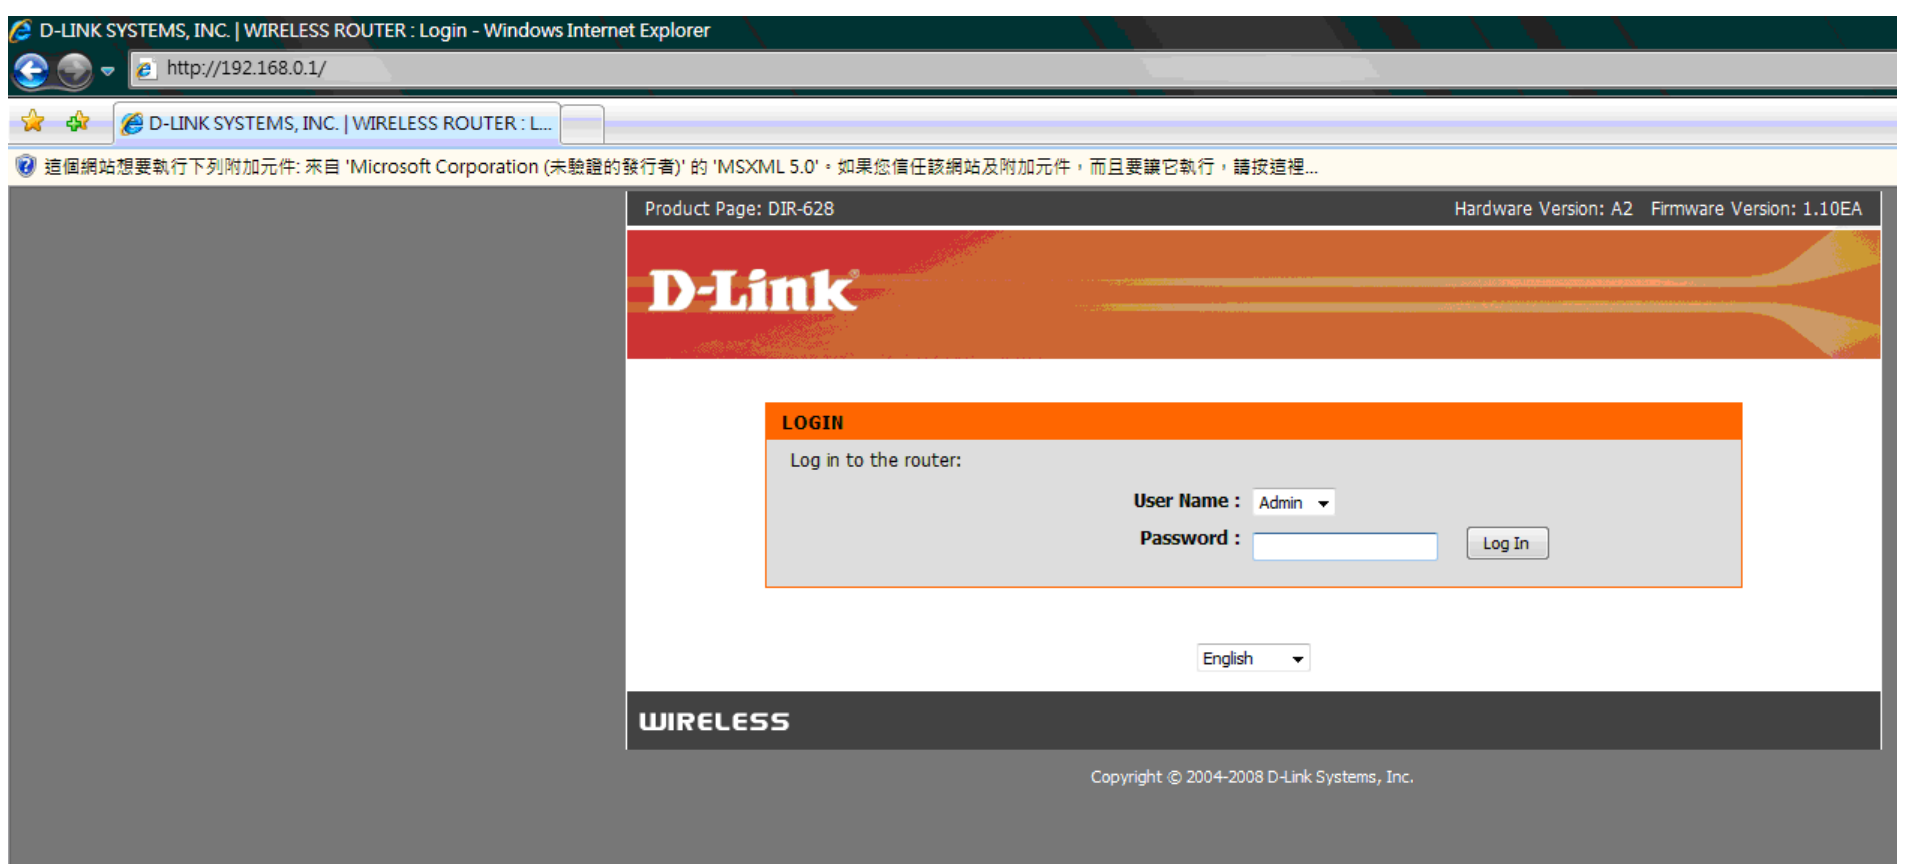

啓動 UPnP -> 進階設定 -> 進階網路 -> 啓動 UPnP

產品頁: DIR-628 硬體版本: A2 韌體版本: 1.10EA

The screenshot shows the 'Advanced Network' configuration page for a D-Link DIR-628 router. The interface is in Chinese. The 'UPnP' section is checked, and the 'WAN Ping' section is also visible. The 'WAN Ping' section has a checkbox for 'Enable WAN Ping response' which is unchecked, and a dropdown menu for 'WAN Ping Inbound Filter' set to 'Allow All'. The 'WAN Port Speed' section is set to 'Automatic detection of connection speed 10/100Mbps'. The 'Multicast Streaming' section is unchecked.

設定完成後將 IP 分享器重新啓動並移除 netTV BOX 電源
待 IP 分享器啓動完成在接上 netTV BOX 的電源